# DO YOUSPEAK DIGITAL?

DTR GEN 3 Product Training February 2011



### **AGENDA**



**DTR 650™ GEN 3** 

DTR 650™ Radio Programming

DTR 650™ Specifications



# DTR 650<sup>TM</sup> DESIGN

MOTOROLA



FIRMWARE Version: R5E.06.00 CODEPLUG Version: CP03.10.0E

Rubber Overmold Grip

**Volume Controls** 

Push-To-Talk Button

Menu Key

#### **Navigation Keys**

Use to select members in scroll list or scroll through menu settings

#### **Accessory Connector**

Use to connect non-audio accessories or for plug-in charging

Whip Antenna for extended coverage

#### Audio Jack

Uses XTN/CLS audio accessories

#### **Option Keys**

Use to select display options

#### Home Key

Use to exit the current menu and return to the idle screen & cancel Private hang-time

#### **Power Button**

Press to turn on, Press and hold to turn off

Microphone

### **NEW GEN3 FEATURES**



### NEW RADIO FEATURES

- Whip Antenna standard for improved coverage
- Private Reply with a Group Call
- Voice VibraCall

### NEW PROGRAMMING FEATURES

- Talk Permit Tone (TPT) independent volume control (earpiece)
- Disable Radio PTT when connected to accessory with remote PTT
- OTA Fleet Cloning
- Option to disable the front panel of radio programming
- Backward Compatible with old firmware Radio



### **NEW FEATURE BRIEF**



### Whip Antenna standard

20% more coverage than stubby

### **Private Reply with a Group Call**

Respond via private call to person who initiated the group call

### Voice VibraCall

Vibration alert when any communication is received

### Talk Permit Tone (TPT) independent volume control

 The volume of the TPT can be reduced in the for end user comfort with audio accessories

# Disable Radio PTT when connected to accessory with remote PTT

Prevents unwanted PTT activations

### **NEW FEATURE BRIEF**



### **OTA Fleet Cloning**

- Send complete revised codeplug to other units in the fleet.
- Simplifies adding or replacing units in the field.
- Removes need of individually programming each code plug through the CPS Program.

### Option to disable the front panel of radio programming

Increases fleet security

### **Backward Compatible with old firmware Radio**

 Fielded radios can be upgraded to Gen 3 software using a flash cable and software package

# **OUT OF BOX FEATURES**

- Public Group Call with Private-call Reply
- Private-call reception
- VibraCall® vibration alert.
- Short Messaging Service (SMS) Texting Messaging reception and origination (preset or via keypad accessory)
- Unit Numeric Caller ID
- Clock / Date
- 900 MHz ISM Band No License Required
  - 500 frequencies divided in 10 zones of 50 each
- Indoor Range up to 325,000 ft<sup>2</sup> or 25 Floors
- Battery Life of 14.5 hours (up to 19 Hours with 1500 mAh battery)
- Frequency Hopping Spread Spectrum (FHSS) Technology
- Ambient noise adjustment
- Loud and Clear, Right Up to the Edge of Coverage
- No Monthly Fees or Per-Minute Charges

### PROGRAMMABLE FEATURES (A)

- Caller ID Alias
- Contact list
- Private Groups
- Private-call origination, reception, return
- Public Group Scan
- Quick access Scroll List
- Call Forwarding
- 150 Group/private Contact list
- Over the Air Fleet Management
  - Unit to Unit Configuration Cloning
  - Remote Disable/Enable
  - Remote Monitor
  - Time Update
- Radio Configuration (codeplug) security password
- Disable Front Panel Programming



### **CALL TYPES**



 While analog radio have only one call type, DTR 650<sup>™</sup> radios have four:

TYPE	EXAMPLE
PUBLIC GROUP	One- to- many
PRIVATE GROUP	One- to- many (Increased privacy)
PRIVATE	One- to- one
DATA	SMS, Alert


- All call types rely upon the 11 digit unit ID assigned at the factory to a unit or by the user to a group
- A User or Group name (alias) can be created for each contact ID

### PUBLIC GROUP CALL



### Digital One-to-Many Calling

- All other DTR Series<sup>™</sup> radios on the same group ID and channel hear communications, similar to analog radio operation.
- The receiving radio displays the transmitting radio name or ID and group.

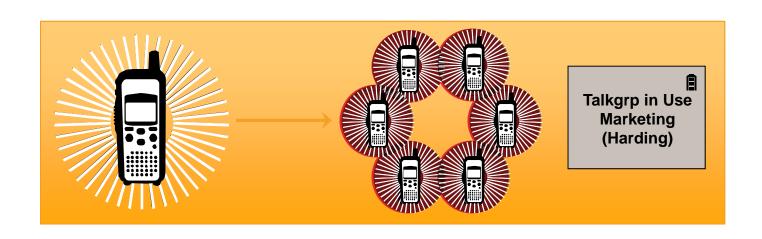


### PUBLIC GROUP CALL



### Group Call with Private Reply


- All other DTR Series<sup>™</sup> radios on the same group ID and channel hear communications, similar to analog radio operation.
- The receiving radio displays the transmitting radio name or ID and group.

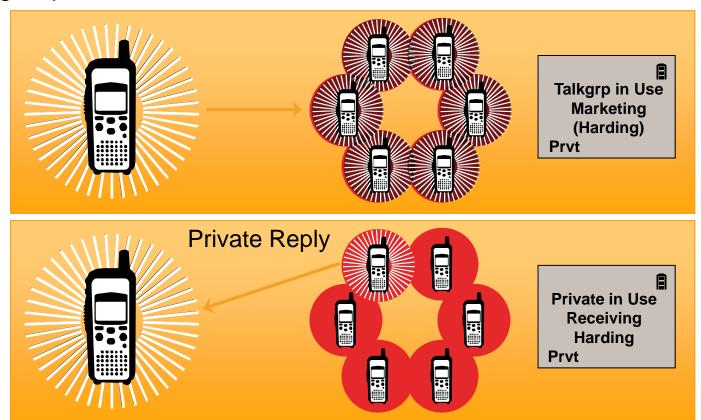


### PRIVATE GROUP CALL



- Digital One-to-Some Calling with Increased Privacy
  - Communicate with specific group members, by forming a Private Group from members of your contact list.

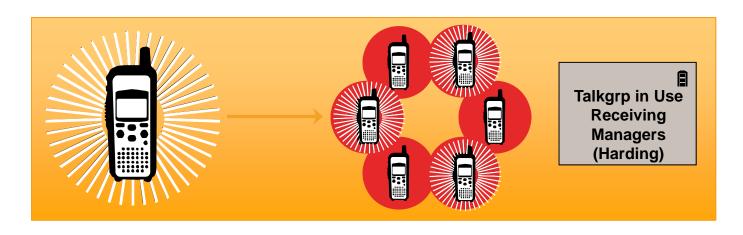


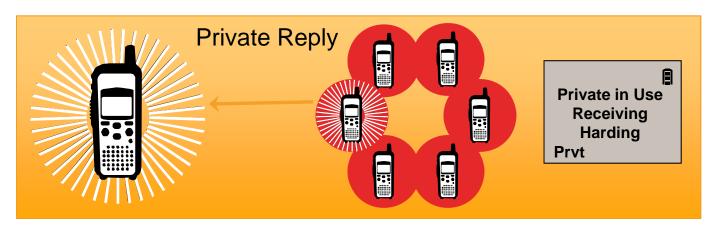

### PRIVATE CALL



- Digital One-to-One Calling
  - Allows you to call and talk privately with a specific radio.
  - DTR Series<sup>™</sup> radios always scan their Channel for Private Calls

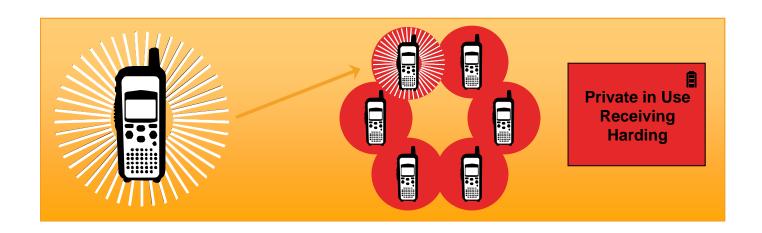


### DATA CALL



### Enhanced Communications

- Allows you to send an alert to a single unit, a text message to an individual or group, or add a contact to a radio over-the-air (OTA).
- Data features expand the definition of two-way radio.

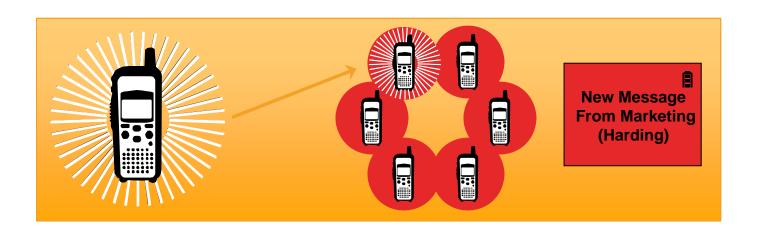

### **AGENDA**



- DTR 650™ GEN 3
- DTR 650™ Radio Programming
- DTR 650™ Specifications

# TRAINING OBJECTIVES (A)



- Programming a fleet of 6 DTR radios
- Replace damaged/lost units in the fleet
- **Master Unit Configuration**
- Add additional units to the master configuration
- Send ID over the air
- **Assign Units to Manager Mode**
- **Create Private Groups**
- **Programming Master Unit**
- **Programming fleet trough cloning**
- **Detail Reports of Fleet and Unit**



### INITIAL STEPS



- Charge unit batteries.
- Install the DTR CPS to your computer
- Connect cable(0105950U15) to serial port

### **NOTE:**

If your computer doesn't have a COM port, you must use a USB serial cable. Belkin USB/serial (F5U409-CU) adapter or Radio Shack USB-to-serial cable is recommended.



# **CONNECT UNIT**









#### **NOTA:**

To program the fleet, you only need to connect one unit to the computer. To more efficiently program other units, use the cloning cable.

### **INITIATE CPS**





# DTR Series™

Customer Program Software Version R02.00








### **CPS INITIAL SCREEN**




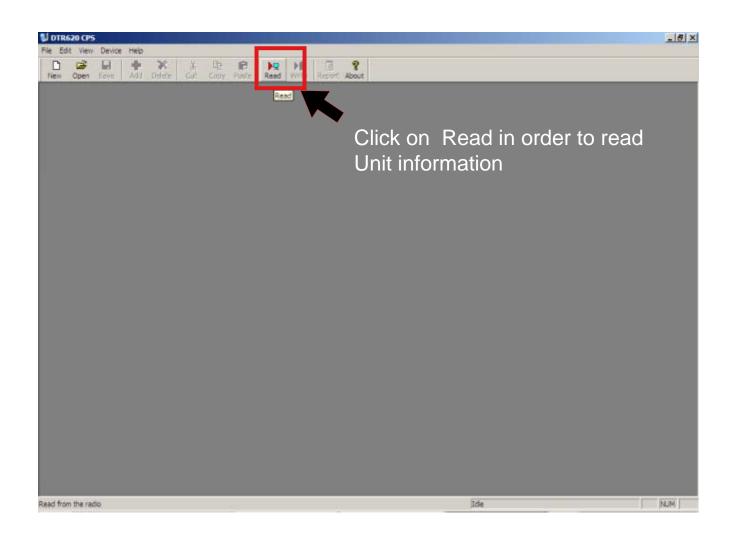



# **CPS INITIAL SCREEN**




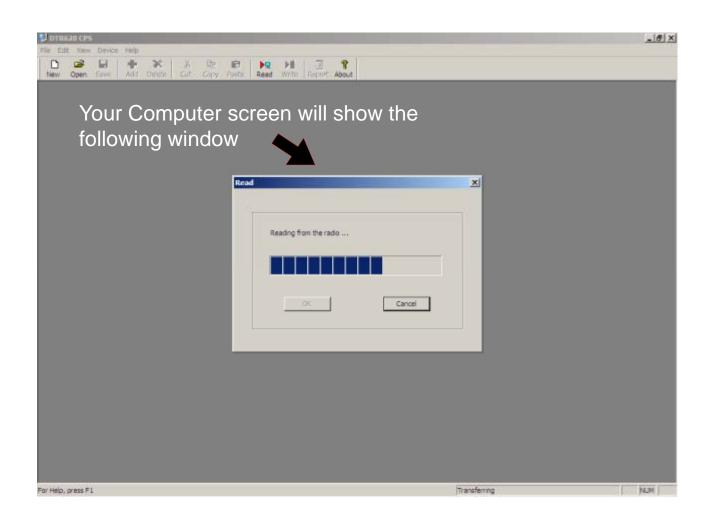



### **UNIT INFORMATION**



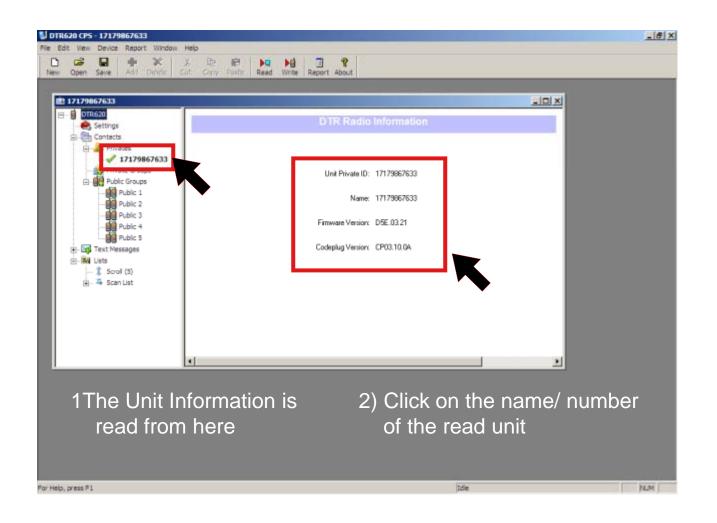



# **UNIT NAME**



U DTR CPS - 17179661576		_ 🗆 ×
File Edit View Device Report Winds	ow Help X	
New Open Save Add Scan [		
<b>17179661576</b>		_OX
□	17179661576	_
⊡ Contacts □ Privates	17 17 300 1070	- 1
		- 11
Private Groups		- 11
Public Groups	Name 17179661576	- 11
Public 1		- 11
Public 2	Channel 1 ▼	- 11
Public 4	ID 17179661576 Read Private ID from Radio	- 11
Public 5	The authority in the sauth of t	- 11
Settings	Home Group None ▼	- 11
Lists	<u> </u>	- 11
□ → Scan List	Group Only 🔲	- 11
🍑 Channel 1 (5)		- 11
🝊 Channel 2 (0)	Ringer │ Ringer 1	- 11
Channel 3 (0) Channel 4 (0)		- 11
		- 11
— 🍑 Channel 6 (0)	<b>&gt;</b> 4	- 11
🍑 Channel 7 (0)		- 11
		- 11
Channel 9 (0) Channel 10 (0)	Delete Current Contact	
⊟ - 🌠 Text Messages	Change the name of the Unit to:	
Are you at work?	•	
Can you meet today?	DEMO 1 Manager	
I can't take your ca No.	•	
On my way.	Or to a name of your choosing	
		┰
For Help, press F1	Idle   Ni	JM   //




# **UNIT NAME**



■ DTR CPS - 17179661576  File Edit View Device Report Win	dow Help	_ D ×
New Open Save Add Scan	X	
<b>17179661576</b>		_ D ×
⊡ ၍ DTR650	17179661576	
Contacts	17173001070	
<b>17179661576</b>		
Private Groups	Name DEMO 1 Manager	
Public 1		
Public 2	nel Channel 1	
Public 5	ID 17179661576 Read Private ID from Radio	- 11
— 📤 Settings ⊟⊶ 🖎 Lists	Home Group None	- 11
\$ Scroll (5)	Group Only □	
⊕ ⊸ 芩 Scan List ⊕ ⊶ ⋈ Text Messages		
'	Ringer   Ringer 1	
	The screen of your	
	computer will show	
	the name you choose 💥	- 11
	Delete Current Contact	
	NOTE:	
	The Unit name can be up to 20	
	characters	
For Help, press F1	Idle   N	






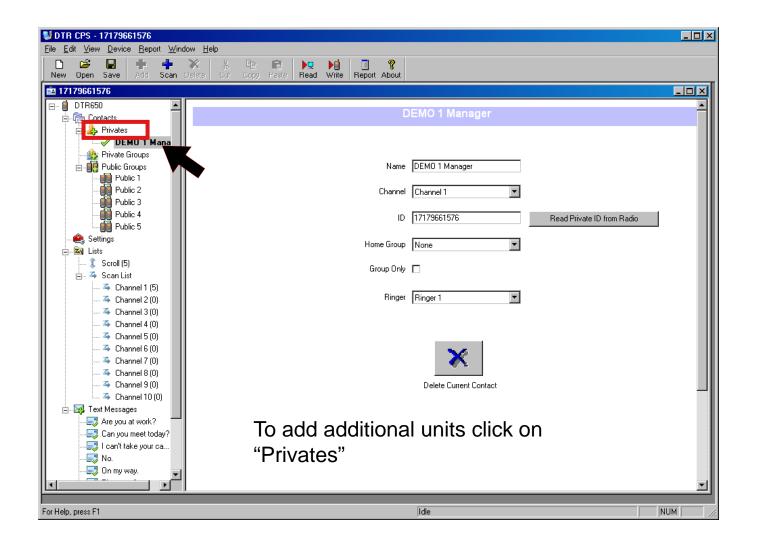






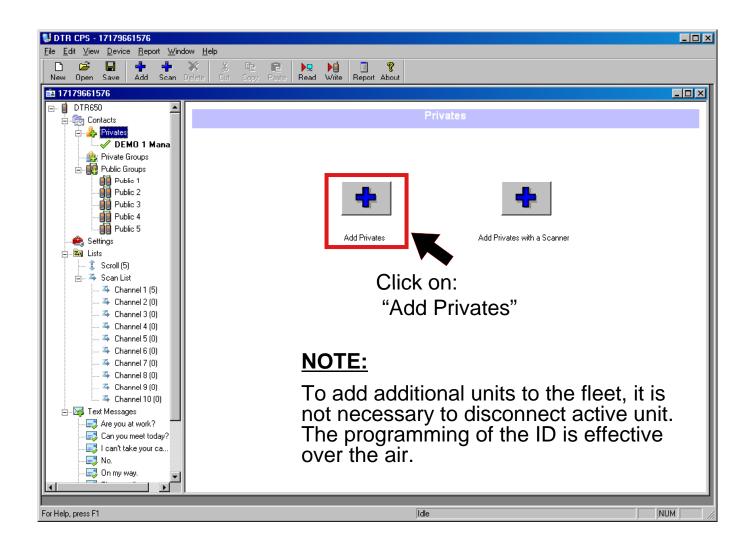



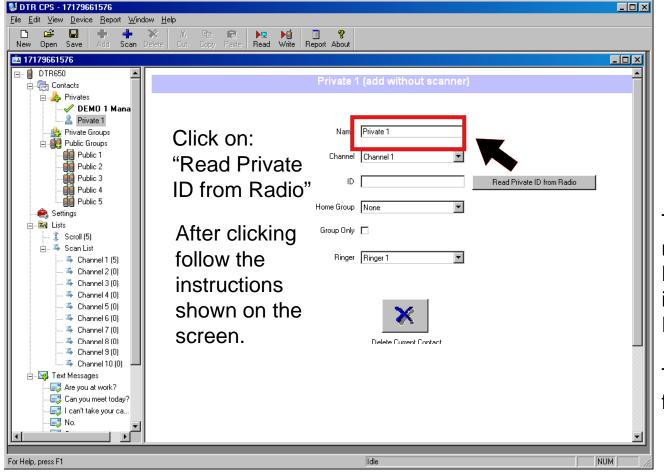




To send the unique ID of the next Unit rapidly press(1) the Home button 3 times and immediately press (2) the PTT button

The screen will show the following:

DE 650

Sending ID.,

DIGITAL

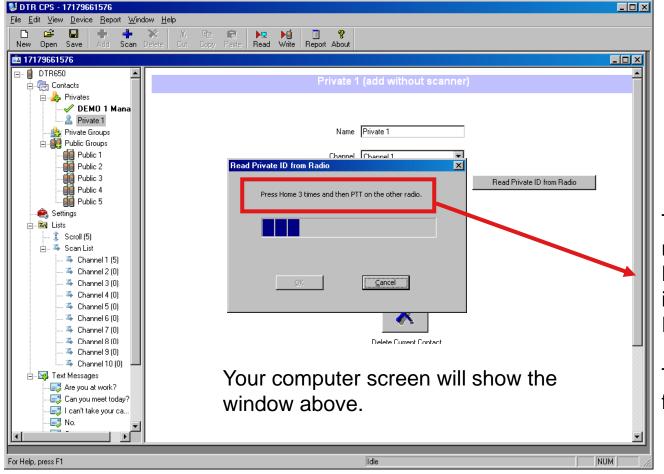



To send the unique ID of the next Unit rapidly press(1) the Home button 3 times and immediately press (2) the PTT button


The screen will show the following:

DE 650

Sending ID.,


DIGITAL



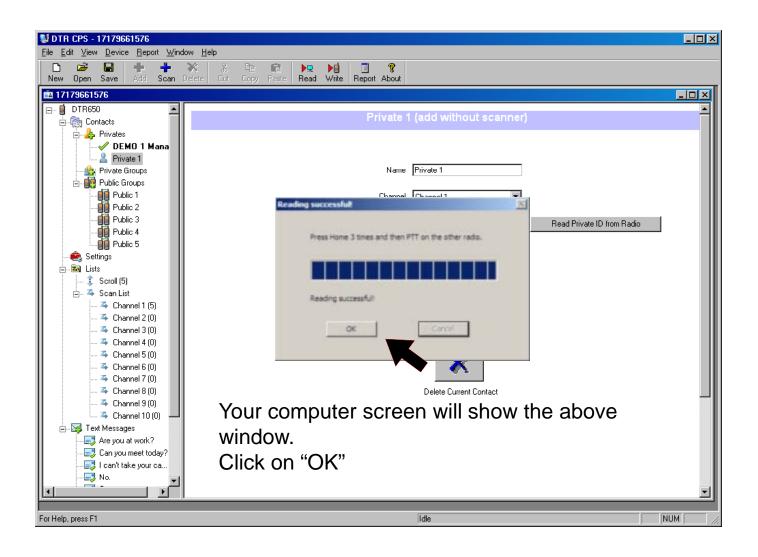






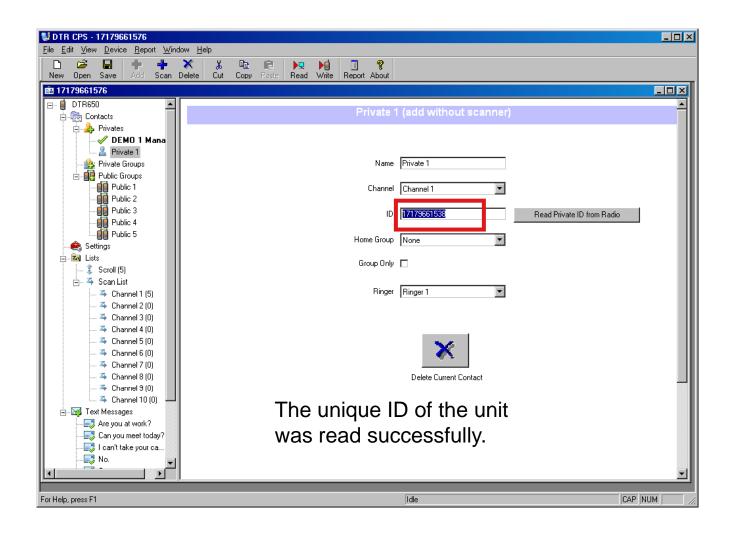






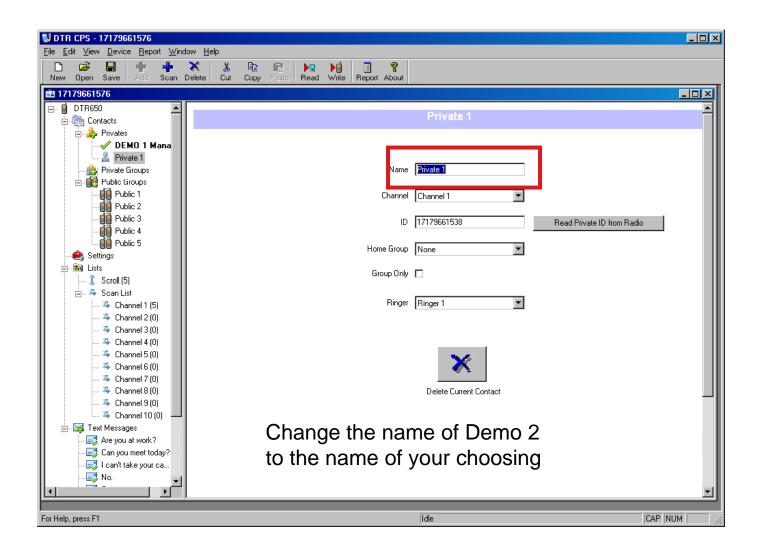






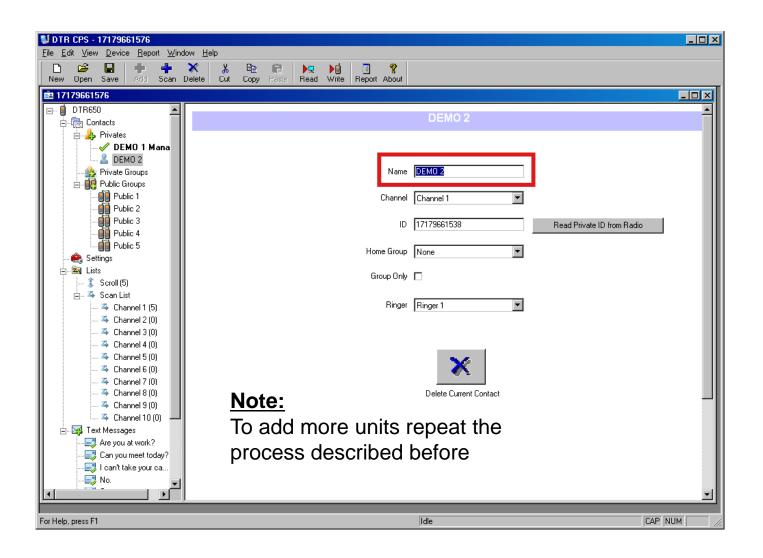



### **MANAGER MODE**



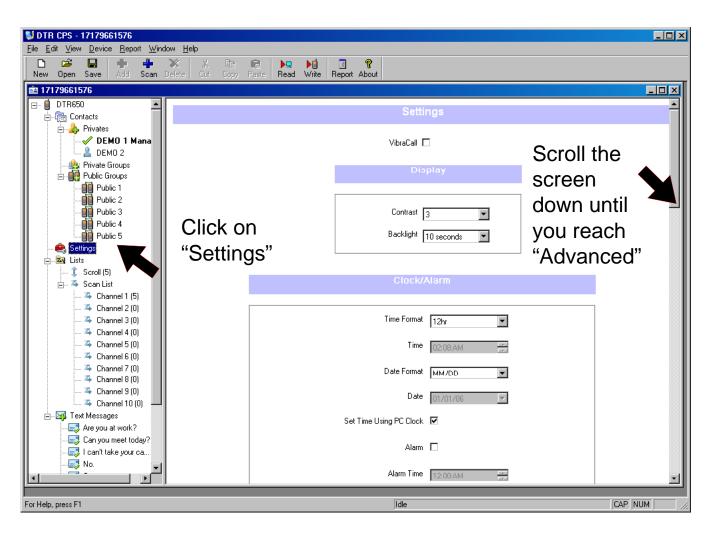


Manager Mode allows advanced functions to manage the fleet, such as:

Deactivation of Units Remote Monitoring Time Synchronization



# **MANAGER MODE**



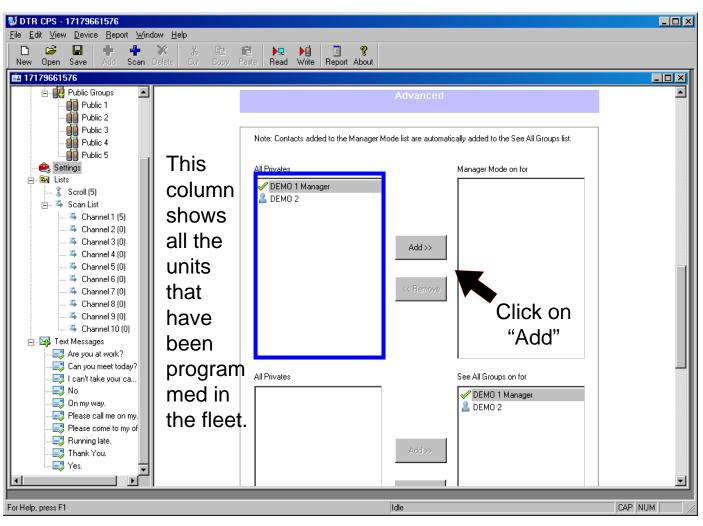


Choose the units in which the Manager Mode will be activated in the left column

#### **NOTE:**

Manager Mode can be activated in every unit you wish. To remain in control of the fleet it is recommended to limit the number units with these capabilities.

### **MANAGER MODE**




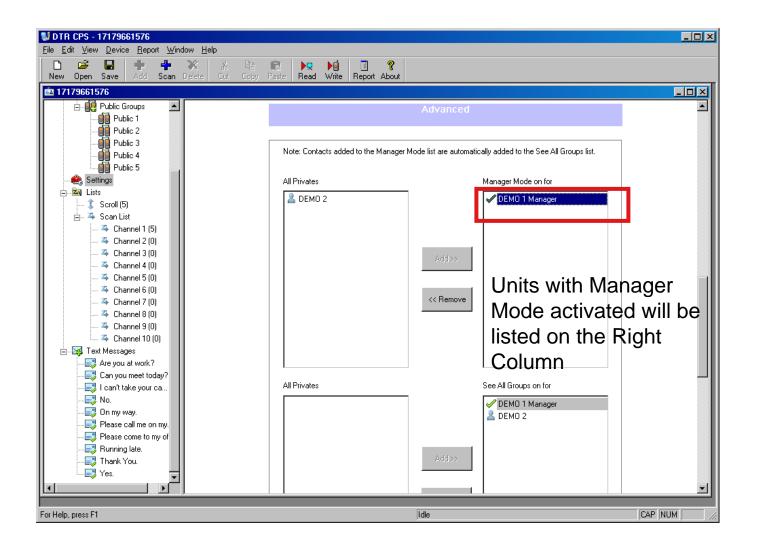




### PRIVATE GROUPS



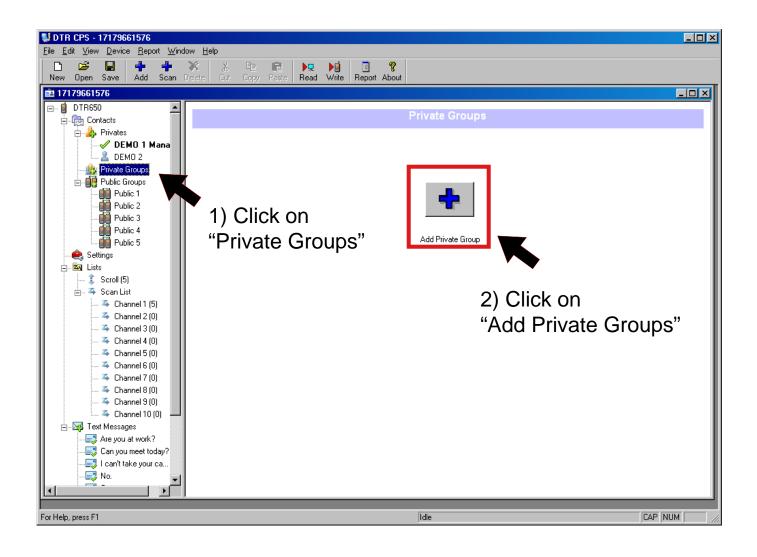





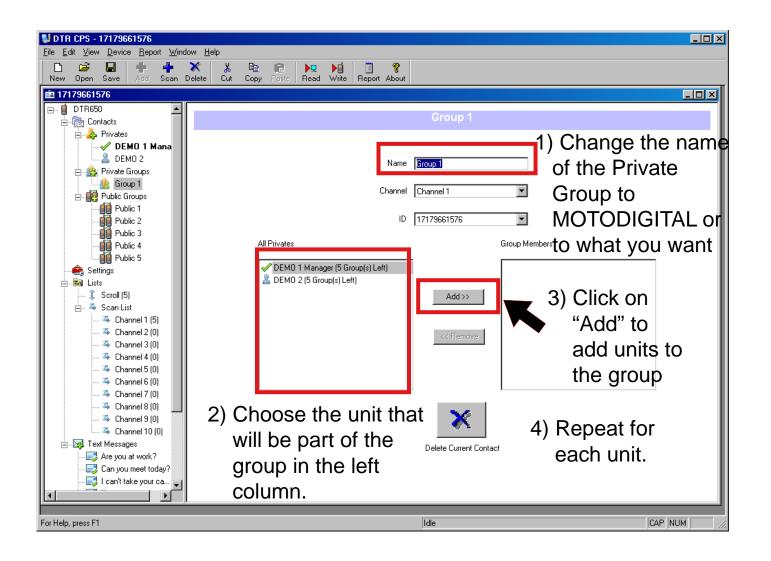







#### NOTE:

To achieve a fully private communication, it is necessary that the ID assigned to the private group is the ID of one of the units that are part of the group.

For example, the id for Group 1should match the radio ID of either Demo 1 or Demo 2 radio or any other group member.

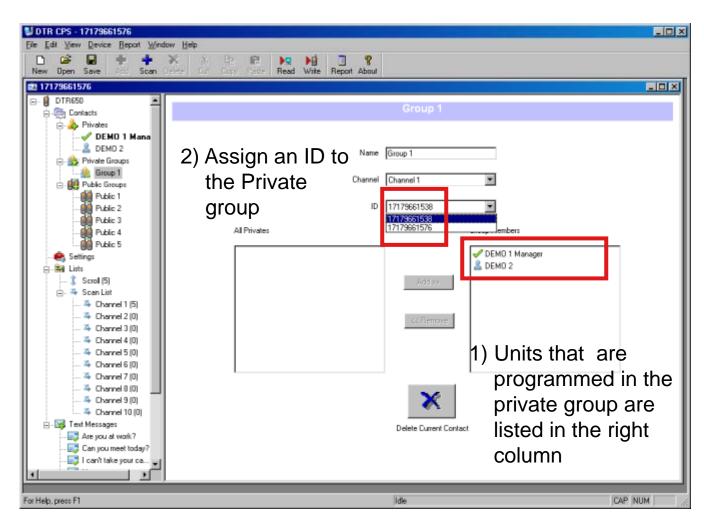




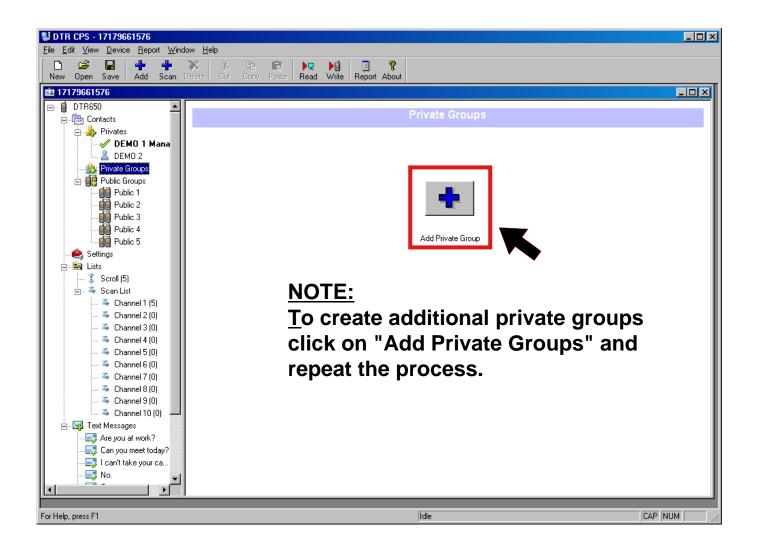






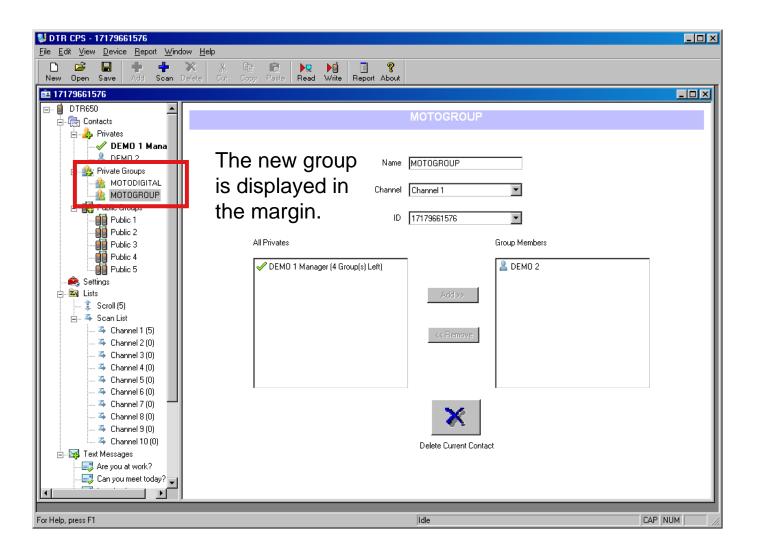



#### MASTER PROGRAMMING




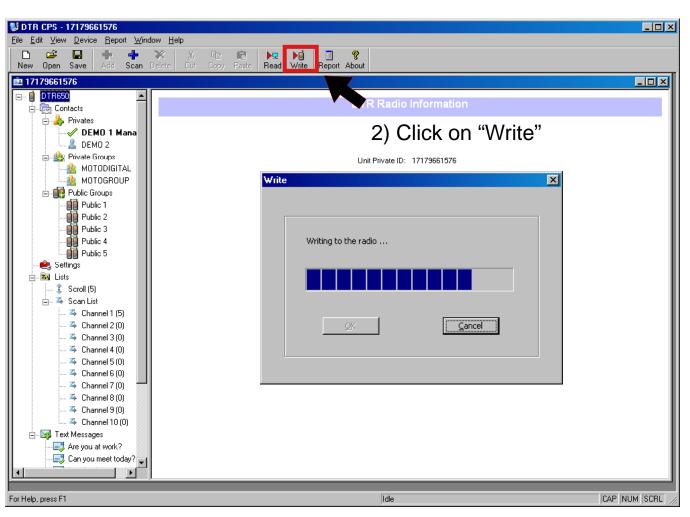

1) After the configuration of the fleet, continue to program the Master Unit

#### MASTER PROGRAMMING



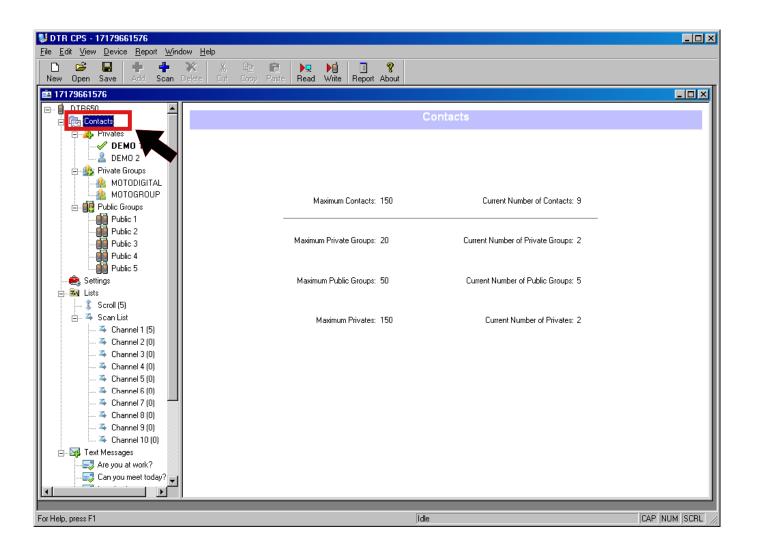



### MASTER PROGRAMMING







### OVER THE AIR FLEET PROGRAMMING



### Master Unit DEMO 1 Manager

To enter cloning mode run the following steps in the <u>order listed:</u>

- I. Keep pressed (a) HOME and at the same time press 3 times (b) the PTT button.
- II. Immediately press (c) the left
- III. button; followed by (d) Up Arrow; then (e) the right button.
- IV. Again keep pressed HOME (a) and press three time the PTT button (b).






# OVER THE AIR FLEET PROGRAMMING





Duplicate Rad...
Remote Add C...
Remote Delet...
Select Exit

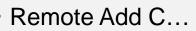

Add: All

To: All

Change Prgm





# OVER THE AIR FLEET PROGRAMMING






Press Go to Add:All To:All Over the Air

Go Back



The process will repeat until all units are completed and the fleet is programmed.



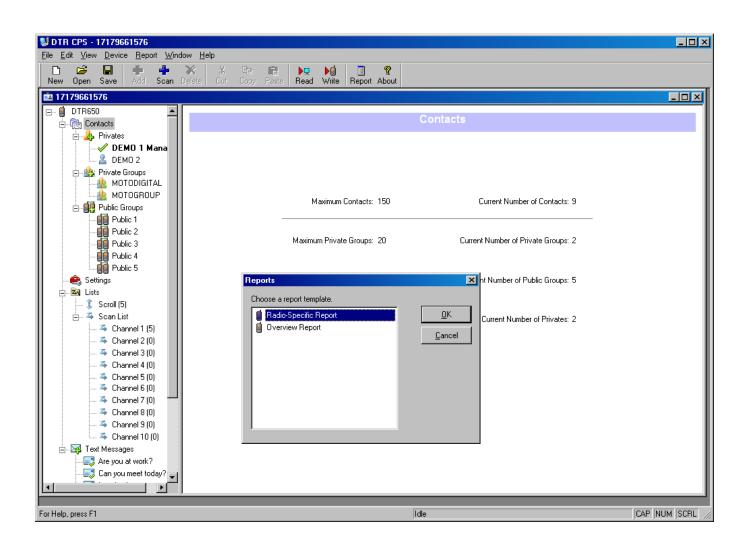

















MOTOROLA MOTOROLA	
Private Groups  MOTODIGITAL (Channel 1)  Group Members	
DEMO 1 Manager DEMO 2	
MOTOGROUP (Channel 1)	
Group Members	
DEMO 2	
Public Groups Public 1 (Channel 1)	
Receive List	
DEMO 1 Manager DEMO 2	
Public 2 (Channel 1)	
Receive List	
DEMO 1 Manager DEMO 2	
Public 3 (Channel 1)	
Receive List	
DEMO 1 Manager DEMO 2	
Public 4 (Channel 1)	
Receive List	
DEMO 1 Manager DEMO 2	
Public 5 (Channel 1)	
Receive List	
DEMO 1 Manager DEMO 2	▼
Print Preview Print Save As	Close
Print Preview Print Save As	Close



### AGENDA



- DTR 650™ Defined
- DTR 650™ Radio Programming
- DTR 650™ Specifications

### DTR 650<sup>TM</sup> SPECIFICATIONS



GENERAL SPECIFICATIONS	
Frequency	900 MHz ISM FHSS
Contact List Capacity	100 (Shared Group/Private)
Default Programming	5 Public Groups
Power Supply	3.8V ± 0.4V
Dimensions	132.3mm H x 57.2mm W x 35.4mm [ (5.2" H x 2.3" W x 1.4" D)
Weight:	
with 1200 mAH Li-Ion Battery	200.2g (7.1oz.)
with 1500 mAH Li-Ion Battery	205.7g (7.3oz.)
Average Battery Life @ 5-5-90 Duty Cycle:	
with 1200 mAH Li-lon Battery	14.5 Hrs.
with 1500 mAH Li-lon Battery	19 Hrs.
FCC Designation	AZ489FT5842
IC Designation	109U-89FT5842
RECEIVER SPECIFICATIONS	
Sensitivity: (3% BER Sensitivity)	-125 dBm
Frequency Stability: (-30° C to +60° C)	± 0.0006% (± 5PPM)
Spur Rejection	55 dB
Blocking Immunity:	
Interferer from ±500 KHz to ±1 MHz	75 dB
Interferer from ±1MHz to ±15 MHz	80 dB
Audio Output @ < 5% Distortion	1W
FRANSMITTER SPECIFICATIONS	
RF Output	1W
Channel Spacing	50 kHz
Frequency Stability: (-30° C to +60° C)	± 0.0005% (± 5PPM)
Spurs/Harmonics	500 uV/m ( 3m)
Audio Response:	
(from 6 dB/oct.Premphasis, 300 to 30000 Hz)	+1, -3 dB
Audio Distortion	
@ 1000 Hz, 60% Rated Max. Dev.	<3%
TX ACCPR	-50 dBc
FCC Modulation	8-level FSK 900 MHz ISM FHSS



### THANK YOU