SW Upgrade Instructions For LEX L11 Verizon Devices

SW upgrade procedure when initial device setup

SETUP WIZARD"

	⊿ 🕯	2		♥⊿ 🗎	♥⊿ 🗎
	Welcome ENGLISH (UNITED STATES) • LET'S GO	Uelcome to your LEX L11n Copy your data From an iPhone® or Android device, or the cloud Set up as new Get a fresh start	Connect to Wi-Fi To continue setup, connect to a network Roland Roland_5 DIRECT-C2-HP OfficeJet Pro 8720 See all Wi-Fi networks See all Wi-Fi networks Connect to Wi-Fi later	Checking for updates This may take a minute or two	<section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header>
EXIT TO GOOGLE SETUP WIZARD	Emergency Vision Settings	Δ	\triangleleft	4	\triangleleft
Power on device Insert Verizon SIM Card and power on the device. Press "Exit to GOOGLE	Welcome Standard welcome screen		Wi-Fi Select the WiFi network. After selecting the network, additional "connecting" or "checking	Checking for updates LEX11 is connecting to OTA Server to check if there is SW Update	Update Phone New SW Update has been detected. Press Next to receive the new SW. After the receiving a new SW, the

network" screens may be

shown.

device will restart.

SW upgrade procedure after initial device setup

- 1. Power on Phone
- 2. Insert Verizon SIM
- 3. Connect to WiFi network
- 4. Once device connects to WiFi, the device should receive the indication that a new SW version is available
- 5. Accept Download / Install
- 6. After device reboots; verify the new SW version
 - SW version should be R01.00.40 (in Settings/About Phone/ see bottom Build Number)

